TP-Link AC1900 Setup for Render Sync

These instructions start from a router out of the box. If you have used your router for other things, please reset the router by pressing the "reset" button on the back of the router until the power button is flashing.

- 1. Obtain a USB storage device that will store the files on your router.
- 2. Plug USB into your computer.
- 3. Open File Explorer.
- 4. Select your USB Device under "This PC."
- 5. Right click in the blank space in the window and select "Create New Folder."
- 6. Title the folder: RenderSync. Your page should look like this:



- 7. Safely remove the USB device by right clicking the drive in the list and choosing "Eject."
- 8. Remove drive from your computer.
- 9. Now we will set up the router. Take the router out of the box.
- 10. Connect power cord to the router if not already connected.
- 11. Plug USB device into the port on the side of the router titled "USB 3.0."
- 12. Connect the power cord to the router and plug into wall.
- 13. If the router is not on, turn the switch to "on" by pressing the power switch down (circle is off, line is on.)
- 14. Make sure that the wifi is on. You will know it's turned on when the wifi icons on the router are blue. If they are not on, press and hold the wifi button on the side of the router by the "USB 3.0" port. This is what the wifi icons look like:

- 15. Now go back to your computer. On the right side of your taskbar, click on your Network icon to open your available networks.
- 16. Look for the name of your router in the list. It will be named "TP-LINK..."
- 17. Choose the router and click "Connect."
- 18. You will be prompted to enter the network security key. This is found on the back of your router after "Wireless Password/PIN."
- 19. Type in the password and click "Next."
- 20. You are now connected to the router.
- 21. Open a web browser, such as Chrome, Firefox or Internet Explorer.
- 22. In the navigation bar, type the router's IP address, which is by default: 192.168.0.1
- 23. You will be prompted to input a username and password. Default for TP-Link is: Username: admin Password: admin
- 24. At the top of the page, choose the "Advanced" tab (furthest to the right).
- 25. On the left side of the page, select "Wireless 2.4GHz."
 - a. What about 5.0?
- 26. Select "Wireless Settings" on the submenu.
- 27. Under "Wireless Network Name," clear the current name and type (no spaces): RenderSync
- 28. Make sure that "Enable SSID Broadcast" is checked.
- 29. Don't change any other settings here. Your page should look like this:

TP-LINK Wireless Router Archer C9	Quick Setup Basic	O ** Advanced
Status	Wireless Settings (2	.4GHz)
Metwork		
	Wireless Network Name:	RenderSync (Also called the SSID)
Dual Band Selection	Region:	United States
🔊 Wireless 2.4GHz 🗸 🗸	Warning:	Ensure you select a correct country to conform local law. Incorrect settings may cause interference.
Wireless Settings	Mode:	11bgn mixed 🗸
• WPS	Channel Width:	Auto 🗸
Wireless Security	Channel:	Auto 🗸
Wireless MAC Filtering		
Wireless Advanced		✓ Enable SSID Broadcast
Wireless Statistics		Enable WDS Bridging
Wireless 5GHz		Save
€ Guest Network		
DHCP		
🖉 USB Settings		

- 30. Click "Save."
- 31. Router will reboot to save this change.

- 32. You will now need to connect to the router under the new name. On the right side of your taskbar, click on your Network icon to open your available networks.
- 33. Choose the network "RenderSync."
- 34. Input the network security key again. This is found on the back of your router after "Wireless Password/PIN."
- 35. Now go back to your web browser and refresh the page.
- 36. Choose the "Advanced" tab at the top.
- 37. Now select "Wireless Security" on the left menu under "Wireless 2.4GHz."
- 38. Select "WPA/WPA2 Personal(Recommended)."
- 39. Under "Wireless Password" type the password you would like the users to use to connect to the router. Make this password unique and memorable.
- 40. Don't change any other settings here. Your page will look like this:

TP-LINK Wireless Router Archer C9	Quick Setup Basic	O ** Advanced
Status	Wireless Security	2
Network		
Dual Band Selection	O Disable Security	
Wireless 2.4GHz 🗸	WPA/WPA2 - Personal(Recommended)
	Version:	WPA2-PSK
 Wireless Settings 	Encryption:	AES 🗸
WPS	Wireless Password:	render2014
Wireless Security		(You can enter ASCII characters between 8 and 63 or Hexadecimal characters between 8 and 64.)
Wireless MAC Filtering	Group Key Update Period:	Seconds (Keep it default if you are not sure, minimum is 30, 0 means no undate)
Wireless Advanced		
	O WPA/WPA2 - Enterprise	
Wireless Statistics	Version:	Automatic 🗸
Wireless 5GHz	Encryption:	Automatic
Wireless Joinz	Radius Server IP:	
€ Guest Network	Radius Port:	1812 (1-65535, 0 stands for default port 1812)
	Radius Password:	
PHCP	Group Key Update Period:	0 (in second, minimum is 30, 0 means no update)
USB Settings		

- 41. Scroll down and click "Save."
- 42. Your router will reboot to save the changes.
- 43. You will now need to reconnect to the router with the new password. On the right side of your taskbar, click on your Network icon to open your available networks.
- 44. Choose the network "RenderSync."
- 45. Input the password that you chose above. If it is not connecting, you may have to right click the network and choose "Forget Network" as it could be using the old password.
- 46. Now go back to your browser and refresh the page.
- 47. Choose the "Advanced" tab at the top.
- 48. On the left menu, select "USB Settings."

49. On the submenu, choose "Device Settings." Make sure that "volume1" is active. You will know it's active when the box is checked. Your page will look similar to this:

TP-LINK Wireless Router Archer C9	Quick Setup	Basic Advanced		Logout Re
🐼 Status	Device Settin	l qs		
Network		-		
Dual Band Selection	Scan sda WD:			Safely Remove
Wireless 2.4GHz	ID Volume	Capacity	Free Space	Active
Wireless 5GHz	1 volume1	931.5 GB	923.2 GB	
🕄 Guest Network				
DHCP				
🖉 USB Settings 🛛 🗸				
Device Settings				
File Sharing				
Print Server				
NAT Boost				
• Forwarding				

- 50. Now, select "File Sharing" under "USB Settings."
- 51. Click "Use Following Account."
- 52. You will need to input this information. Replace default information with:
 - a. **Username:** rendersync

This needs to be in all lowercase letters with no spacing.

- b. **Password:** render2014
- c. Confirm Password: render2014
- 53. Click "Save."
- 54. On this same page, find "Sharing Mode" toward the bottom.
- 55. Make sure that "Share All" is chosen.

TP-LINK Wireless Router Archer C9	Quick Setup Basic	Advanced	O # Logout Rebo
Status	File Sharing		
Network			
Dual Band Selection	Sharing Account Prepare the sharing account for the account as the sharing account.	e sharing contents. You can use the login user a	account or set a new user
Wireless 2.4GHz	Use Login Account		
Wireless 5GHz	Use Following Account	rsync	
Guest Network	Password: ••••• Confirm Password: •••••	••••• @	
J DHCP	s	ave	
🖉 USB Settings 🛛 👻			
Device Settings	Sharing Settings Network/Media Server Name:	TP-LINK_25A7D8	
File Sharing	Enable Access Method	Link	Port
Print Server	Network Neighborhoo	d \\192.168.0.1	
	FTP	ftp://192.168.0.1:21	21
INAT BOOS	FTP (Remote)	ftp://0.0.0.0:21 Edit	21
• Forwarding	Sharing Mode:	Share All O Share Selected Folders	
Security	Authentication:	Require Login	
🕅 Parental Control		Save	

- 56. Click "Save" at the bottom of the page.
- 57. On the left menu, scroll down to "System Tools."
- 58. On the submenu, select "Reboot."
- 59. Click "Reboot." You may lose connection during this time. You will see a progress bar while it is rebooting that will look like this:

TP-LINK Wireless Router Archer C9	Quick Setup Basic Advanced	O Logout	* Reboot
Status	Reboot		
Network			
Dual Band Selection	Rebooting		
Wireless 2.4GHz			_
Wireless 5GHz			
Guest Network			
Э рнср			
USB Settings			
) NAT Boost			
) Forwarding			
Security			
Parental Control			
Access Control			
Advanced Routing			
Bandwidth Control			

- 60. Wait for progress bar to reach 100%.
- 61. Close browser.
- 62. Your device is now ready to do LAN Sync with Render.